



Juliet Balcony Fitting Guide

STEPS 01 - 02

Measure & prepare

01 Choose your balcony

Firstly, measure your structural opening for your doors then add 300mm. for example if your doors are 900mm wide then the balcony required will be 1100mm x 1200mm.

DETAIL 01 / SIZING EXAMPLE



1100 mm balcony height, as shown in the source layouts.

02 Prep the fixings


Depending on what size balcony you have ordered you will need to drill 4-6 holes into your brickwork, please check the diagrams at the bottom of this guide for sizes. Once you have made your holes insert M10 threaded rods with Masonry resin into the holes. (Both products will need to be purchased from your local Builders Merchant/ DIY Store). If installing into a wooden structure, then use a washer and nut to secure the threaded rod from the inside.

INDIVIDUAL FIXING LAYOUTS

Glass sizes & hole positions


Use the drawing matching your ordered balcony width.

1200 mm BALCONY / 4 GLASS HOLES

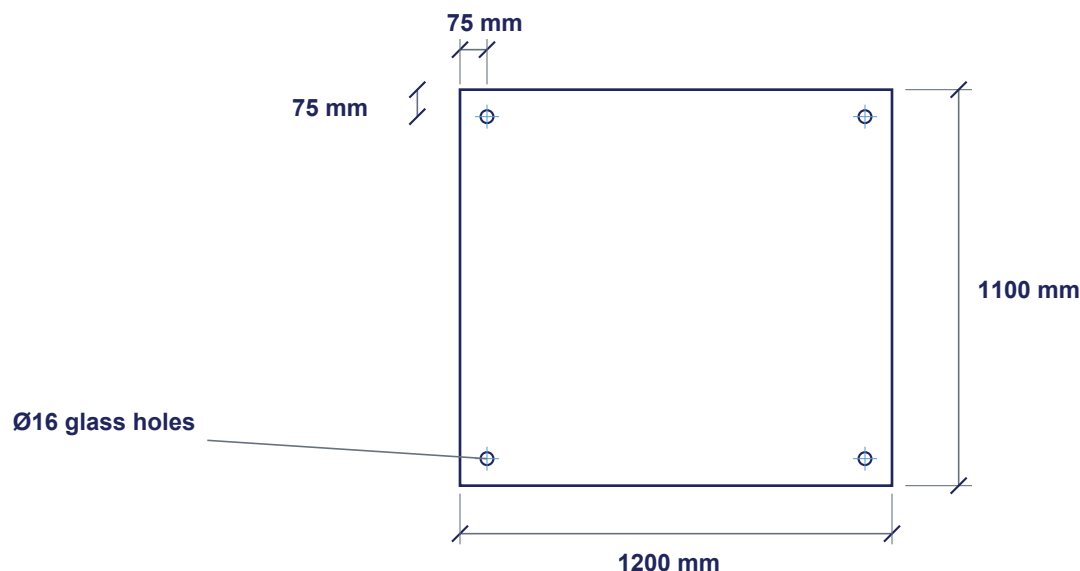

Schematic - not to scale. All dimensions in mm.

1300 mm BALCONY / 4 GLASS HOLES

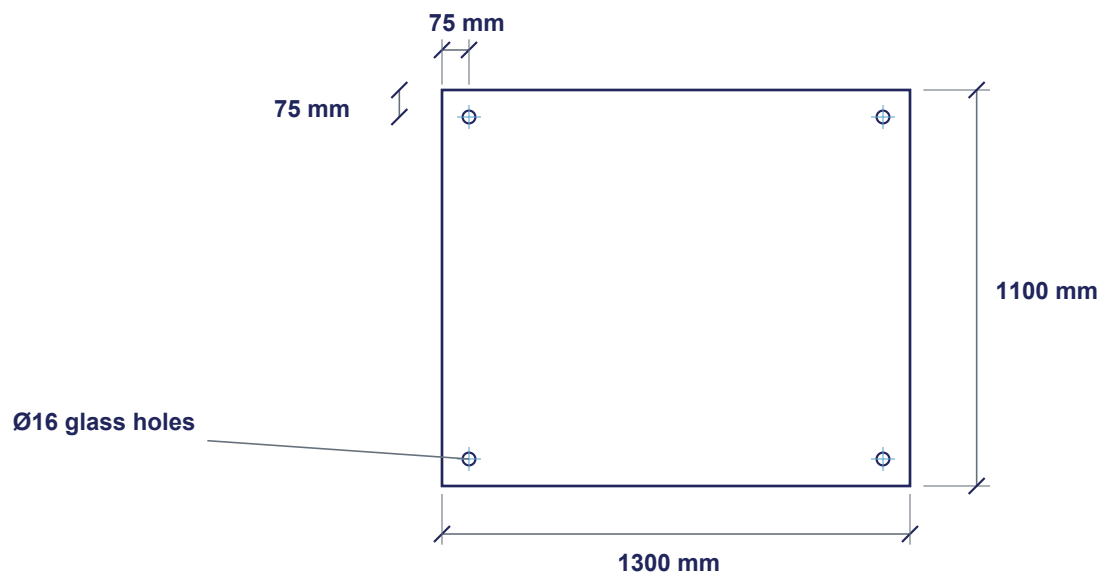


Schematic - not to scale. All dimensions in mm.

INDIVIDUAL FIXING LAYOUTS

Glass sizes & hole positions


Use the drawing matching your ordered balcony width.

1500 mm BALCONY / 6 GLASS HOLES

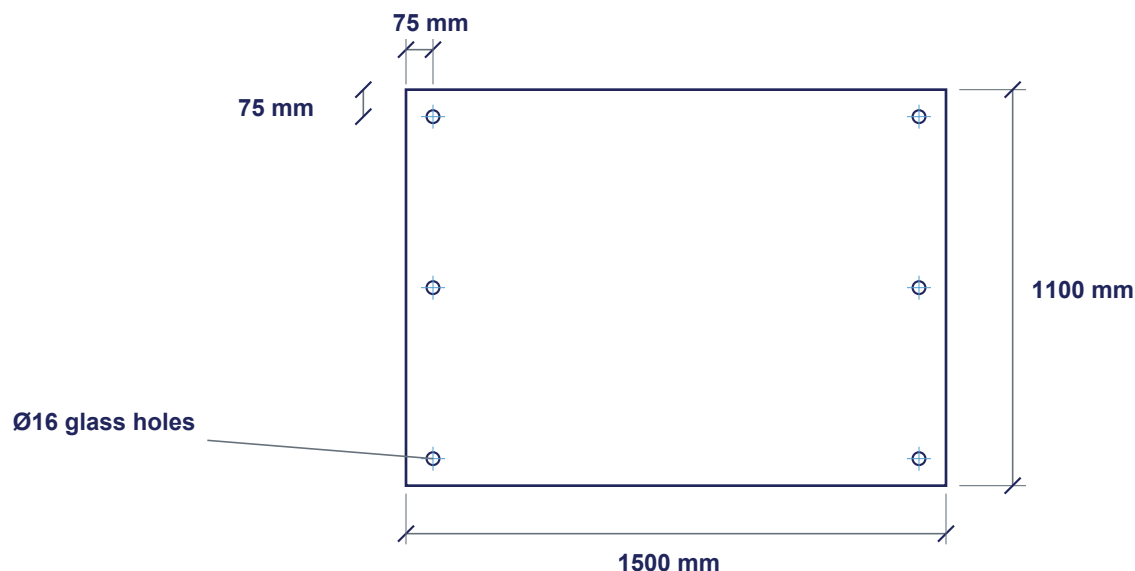

Schematic - not to scale. All dimensions in mm.

1800 mm BALCONY / 6 GLASS HOLES

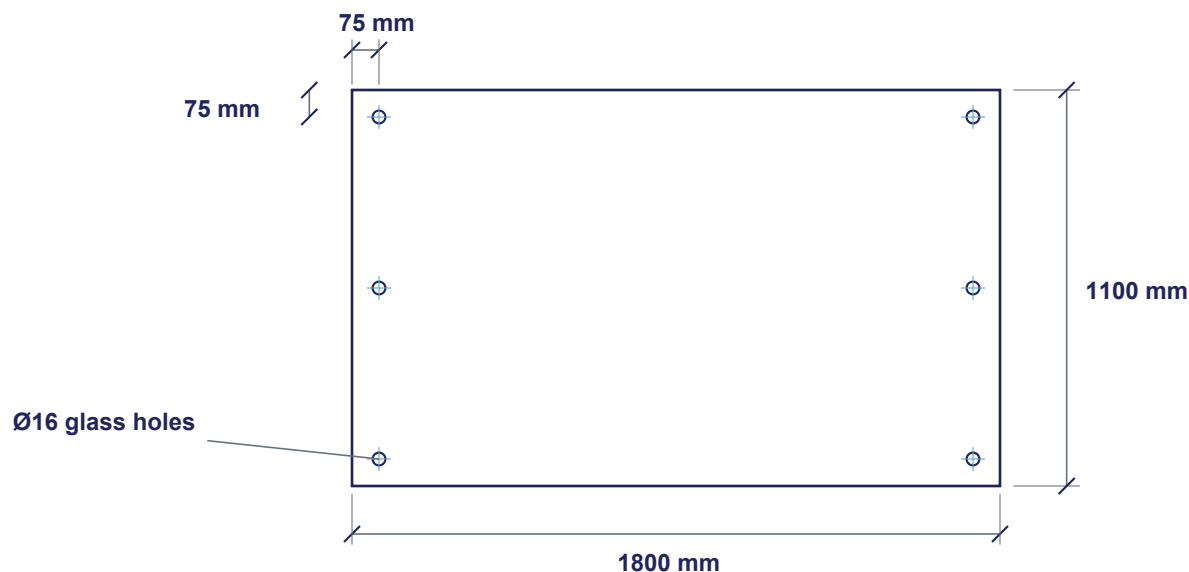


Schematic - not to scale. All dimensions in mm.

INDIVIDUAL FIXING LAYOUTS

Glass sizes & hole positions


Use the drawing matching your ordered balcony width.

2000 mm BALCONY / 6 GLASS HOLES

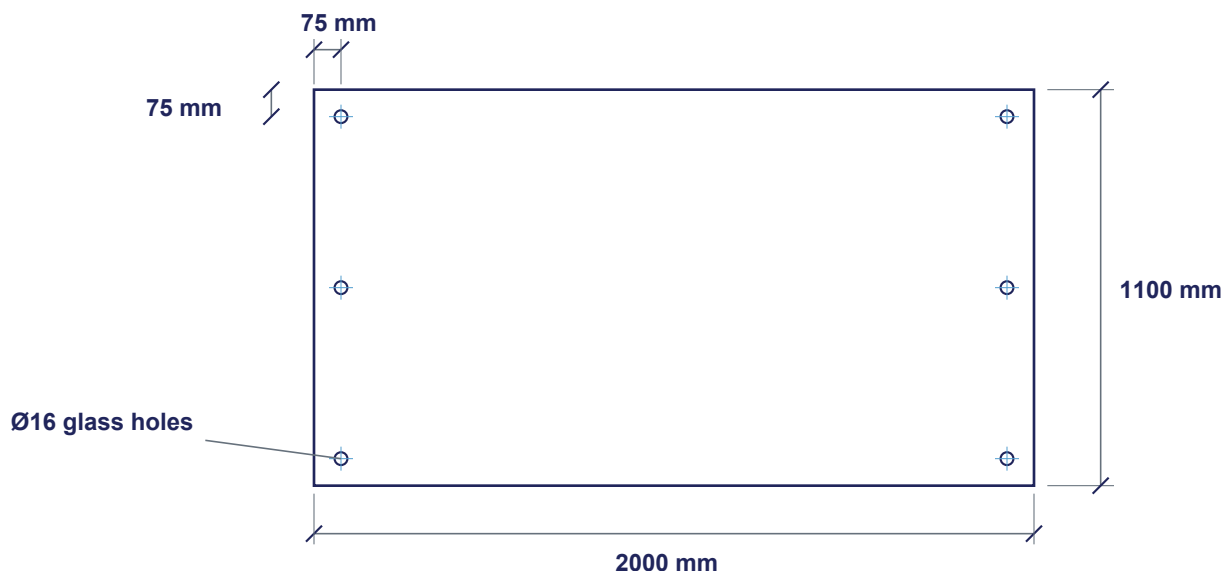

Schematic - not to scale. All dimensions in mm.

2200 mm BALCONY / 6 GLASS HOLES

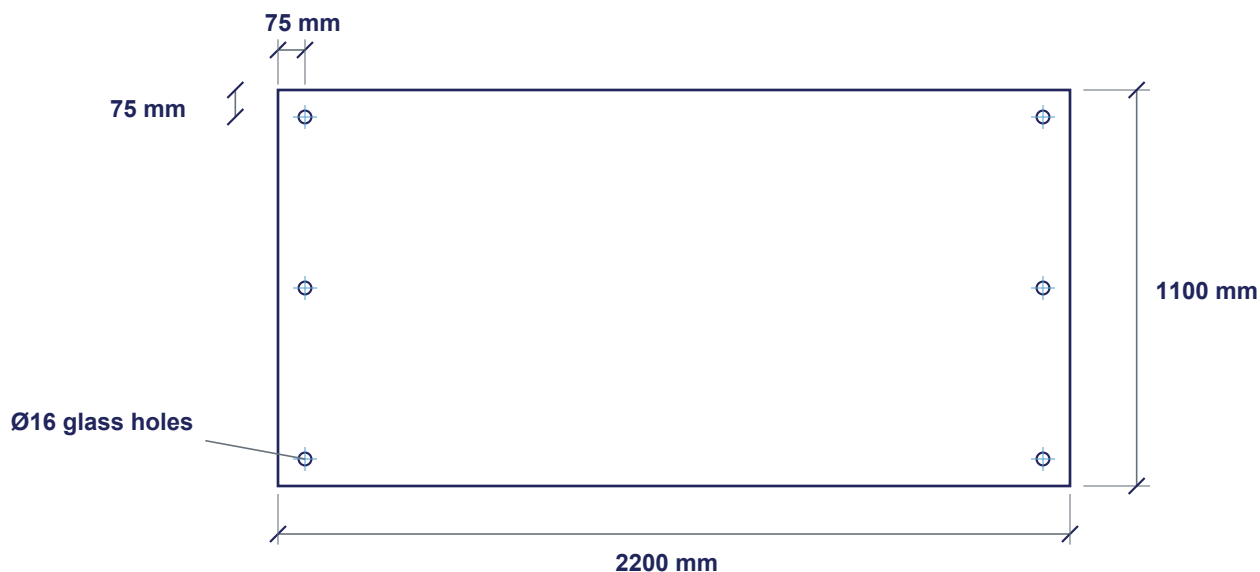


Schematic - not to scale. All dimensions in mm.


INDIVIDUAL FIXING LAYOUTS

Glass sizes & hole positions

Use the drawing matching your ordered balcony width.

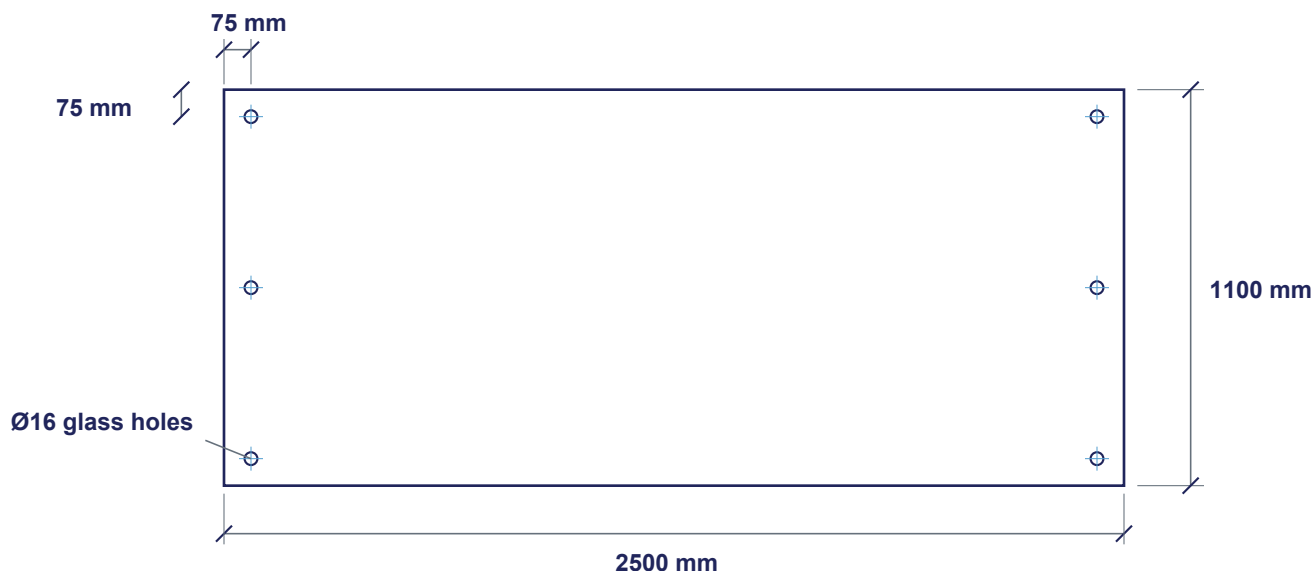2500 mm BALCONY / 6 GLASS HOLES

Schematic - not to scale. All dimensions in mm.

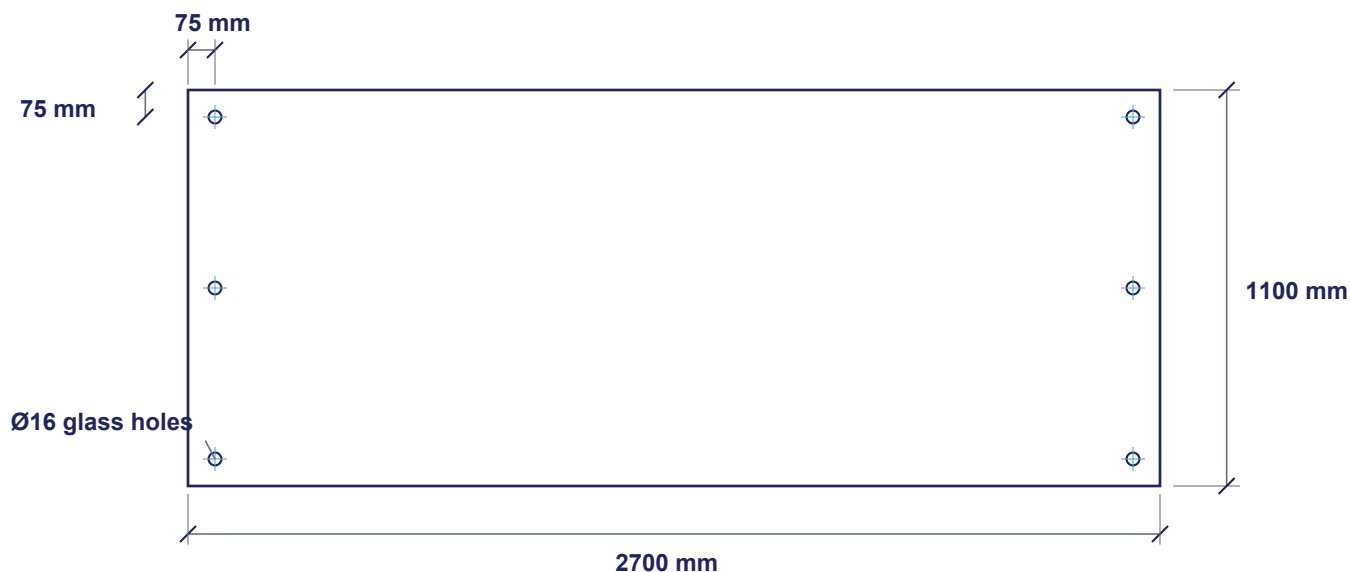2700 mm BALCONY / 6 GLASS HOLES

Schematic - not to scale. All dimensions in mm.

STEP 03

Fit & secure the balcony

03 Fit the balcony

Now screw on half of the mounting brackets supplied by CRL ready for the glass to be lifted into position, once the glass has been lifted into position screw the other half of the bracket to secure the glass into place. Tighten with an Allen key



Original product photograph retained from the supplied fitting guide.

Fixing layouts: pages 3-6 / Hole-count reference: page 8

SIZE REFERENCE

Glass holes by balcony size

Use the correct hole-count layout for your ordered balcony width.

BALCONY WIDTH	GLASS HOLES	LAYOUT
1200 mm	4	Page 3
1300 mm	4	Page 3
1500 mm	6	Page 4
1800 mm	6	Page 4
2000 mm	6	Page 5
2200 mm	6	Page 5
2500 mm	6	Page 6
2700 mm	6	Page 6

See pages 3-6 for the individual glass-hole layouts.

The hole counts on this page replace those in the previous fitting-guide diagrams. Follow Steps 1-3 for the fitting sequence.